

RADU-CAM Grinding Installation Guide

01/04/2024

1 Remarks about the screenshots.....	3
2 Download.....	3
3 Installation and Update.....	4
3.1 Update and License.....	4
3.2 Start installation.....	5
3.3 Select language.....	5
3.4 Welcome.....	6
3.5 Password.....	7
3.6 Installation folder.....	8
3.6.1 New installation.....	8
3.6.2 Update existing installation.....	8
3.7 Start Menu Folder.....	10
3.8 Desktop Icon.....	11
3.9 Start installation.....	12
3.10 Installation finished.....	13
3.11 Shortcut on the desktop.....	14
3.12 More than one shortcut on the desktop.....	14
4 First start.....	15
4.1 Directory of all data and settings.....	15
4.2 Parallel installations of different RADU-CAM Grinding versions.....	16
4.3 License.....	17
4.4 Request of the License Key.....	19
5 Ready for use.....	20
6 Documentation.....	21
7 Language setting.....	23
7.1 Automatic Language setting.....	23
7.2 Manual Language selection.....	24
8 Request of the License Key before installation.....	25
9 Change License Key afterwards.....	26
10 Contact.....	29
11 Disclaimer.....	29

1 Remarks about the screenshots

Some of the screenshots included in this document are from older RADU-CAM Grinding versions. They differ sometimes in version number, colors or some details from the actual version. They represent from the functional point of view the actual version.


2 Download

The actual installation bundle of RADU-CAM Grinding can be downloaded on www.radu-cam.de in the support section.

The installation bundle is called

Install-RADU-CAM-X.X.X-Grinding.exe

X.X.X is the actual version number.

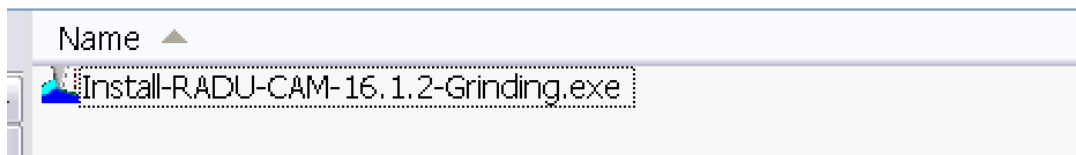

This installation Guide can also be downloaded from the same section separately.

InstallGuide.pdf

3 Installation and Update

This Installation bundle can be used for the update of an existing RADU-CAM Grinding version or new installation of this software.

3.1 Update and License

Please note this on update:

A RADU-CAM Grinding license is only valid up to a certain RADU-CAM Grinding version. The license is valid up to 2 versions higher than the RADU-CAM Grinding version the license was purchased for.


For example if the RADU-CAM Grinding version the license was purchased for is RADU-CAM Grinding version 11, the license is valid up to RADU-CAM Grinding version 13. For RADU-CAM Grinding version 14 a new license has to be purchased.

3.2 Start installation

Double click *Install-RADU-CAM-X.X.X-Grinding.exe*


3.3 Select language

Select the language for the installation dialogs.

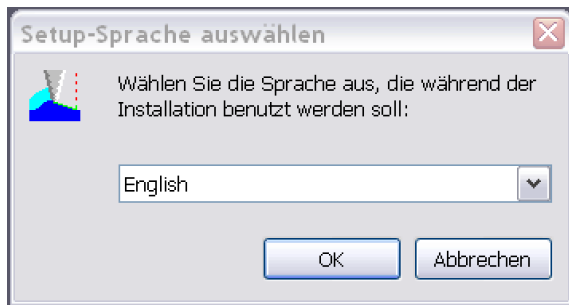

Press **OK**, the language changes for the next dialog!

3.4 Welcome

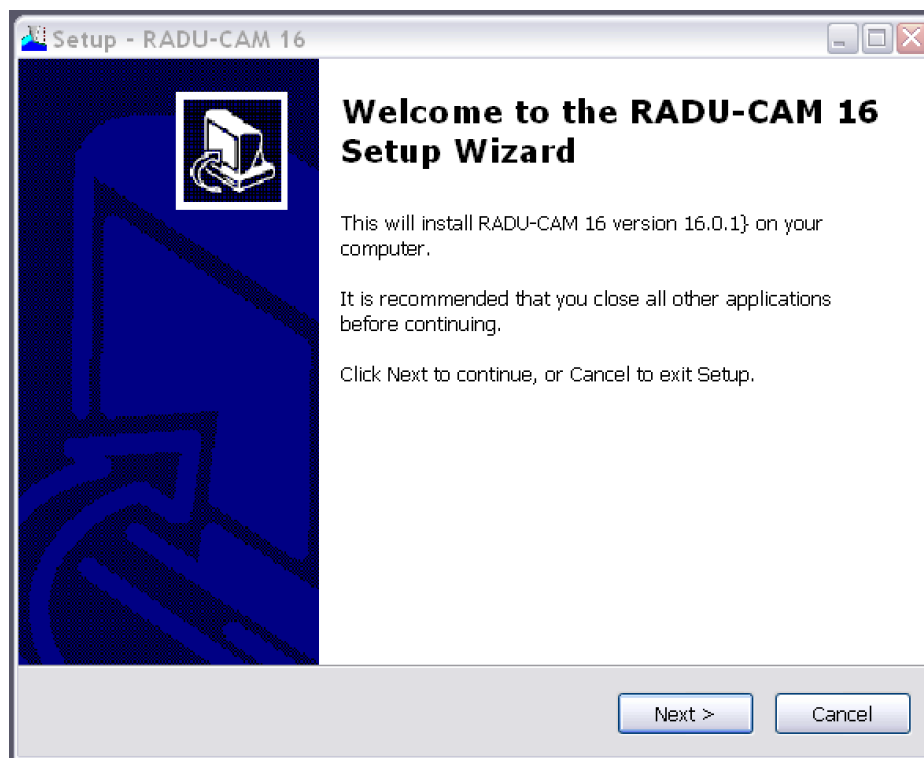


Press **Next**

3.5 Password

For the installation, a password is required.

Ask for the password at RADU-CAM

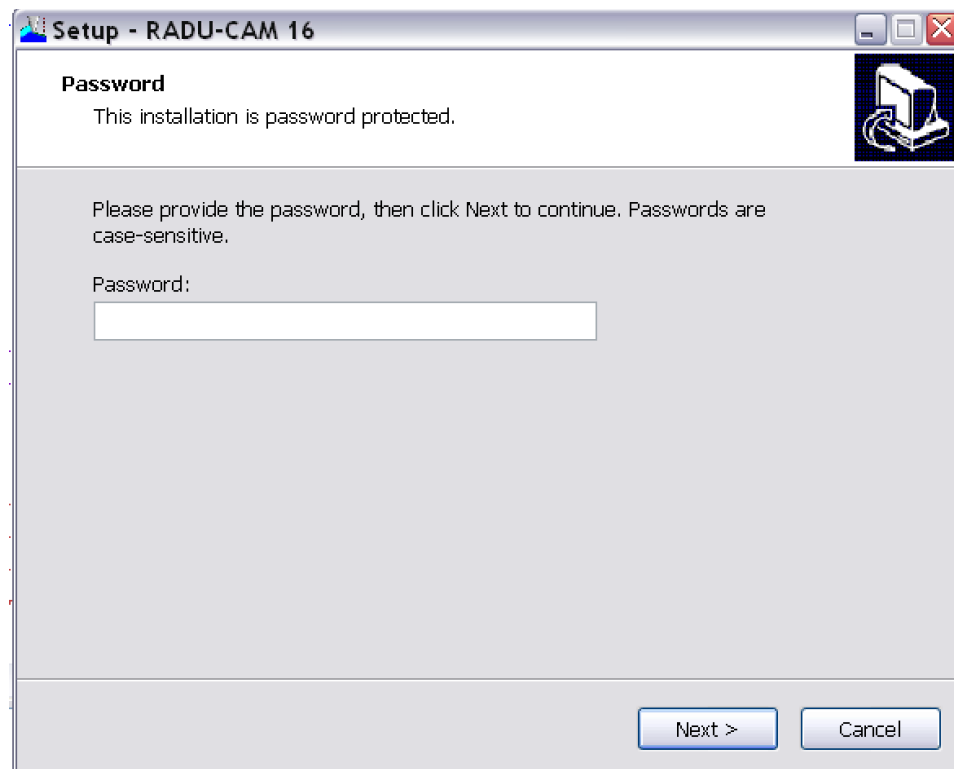

3.6 Installation folder



3.6.1 New installation

If RADU-CAM is installed the first time, enter the folder for the installation.

If the new RADU-CAM Grinding version should be installed parallel to the existing RADU-CAM Grinding version, enter the path to a new folder.


More information on parallel installations of different RADU-CAM Grinding versions is available in a section below.

3.6.2 Update existing installation

If an existing RADU-CAM Grinding installation should be updated, enter the path to the installation folder of this installation.

Press **Next**

If the installation folder of an existing RADU-CAM Grinding is selected, this question follows:

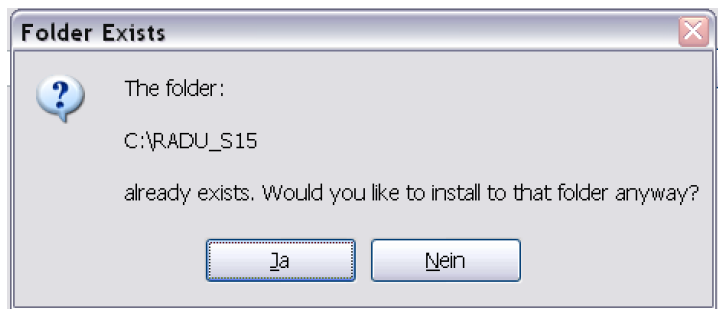


The existing RADU-CAM Grinding version will be overwritten!

All existing data and setting remain preserved!

Select **Yes** or **No**


3.7 Start Menu Folder

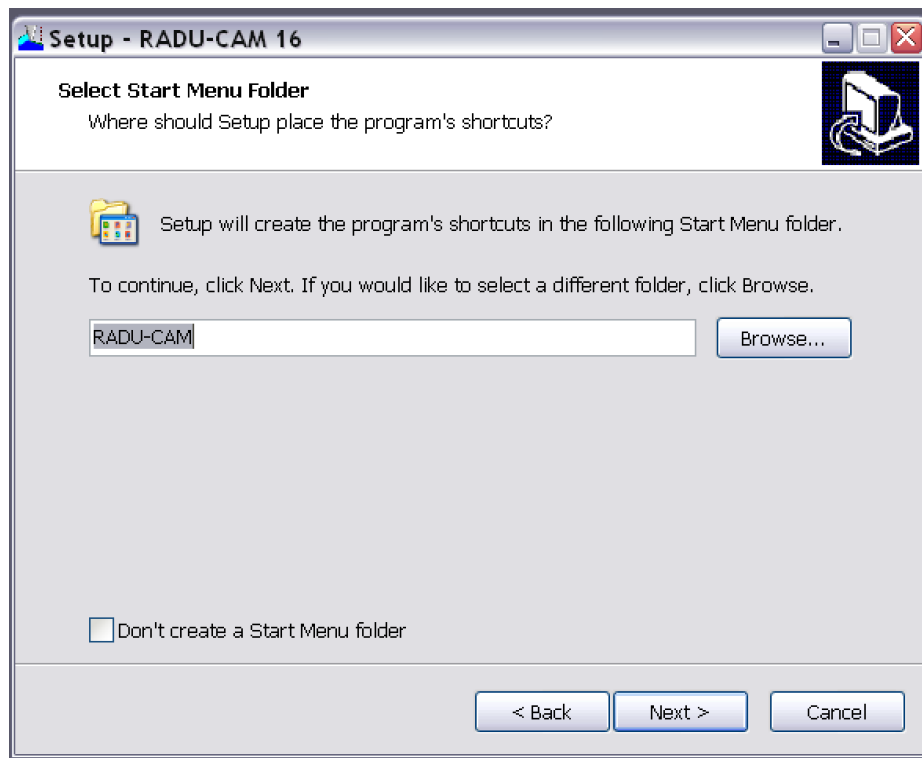

Name of the Start Menu Folder, this do not has to be changed


Press **Next**

3.8 Desktop Icon

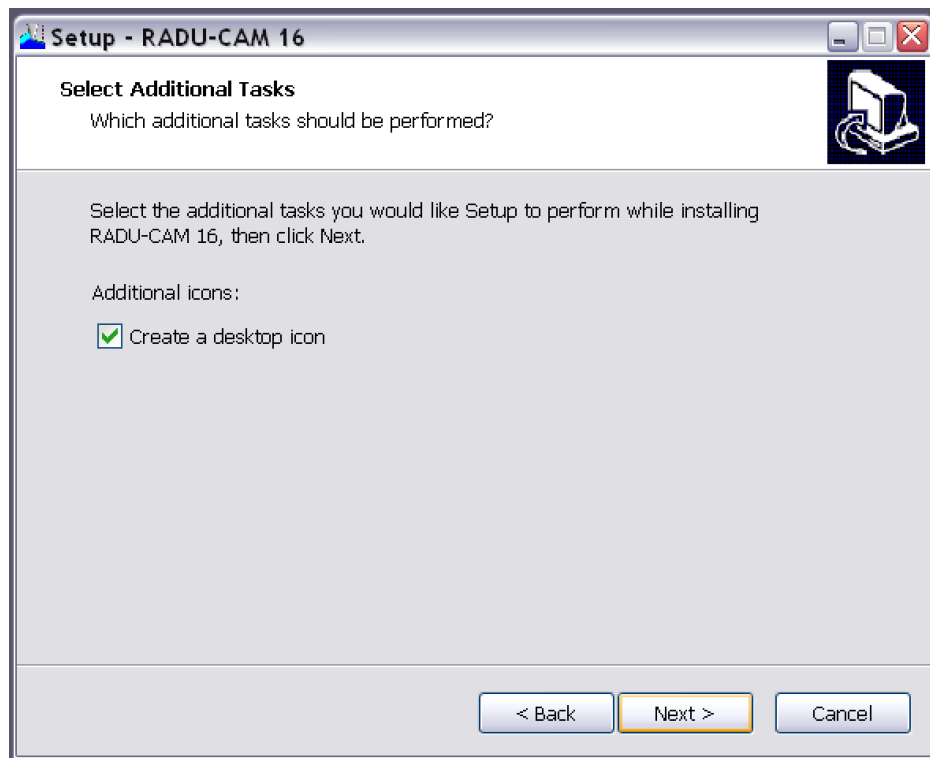

Press **Next**

3.9 Start installation

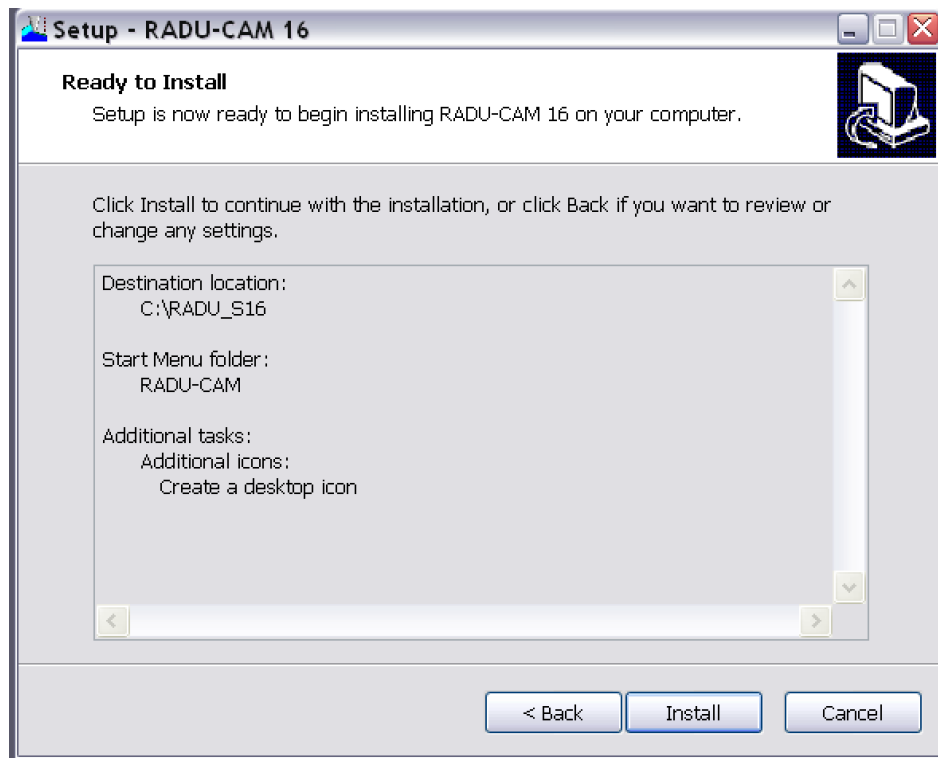

Press ***Install***

Now the real installation of RADU-CAM Grinding starts.

3.10 Installation finished



Press **Finish**

3.11 Shortcut on the desktop



A shortcut on the desktop has been created.


3.12 More than one shortcut on the desktop

After an update, sometimes two shortcuts are available on the desktop, one of the former version and one of the actual version even if the former installation has been overwritten.

In that case, the old shortcut can be ignored or even removed.

4 First start

Double click the shortcut to start RADU-CAM Grinding.

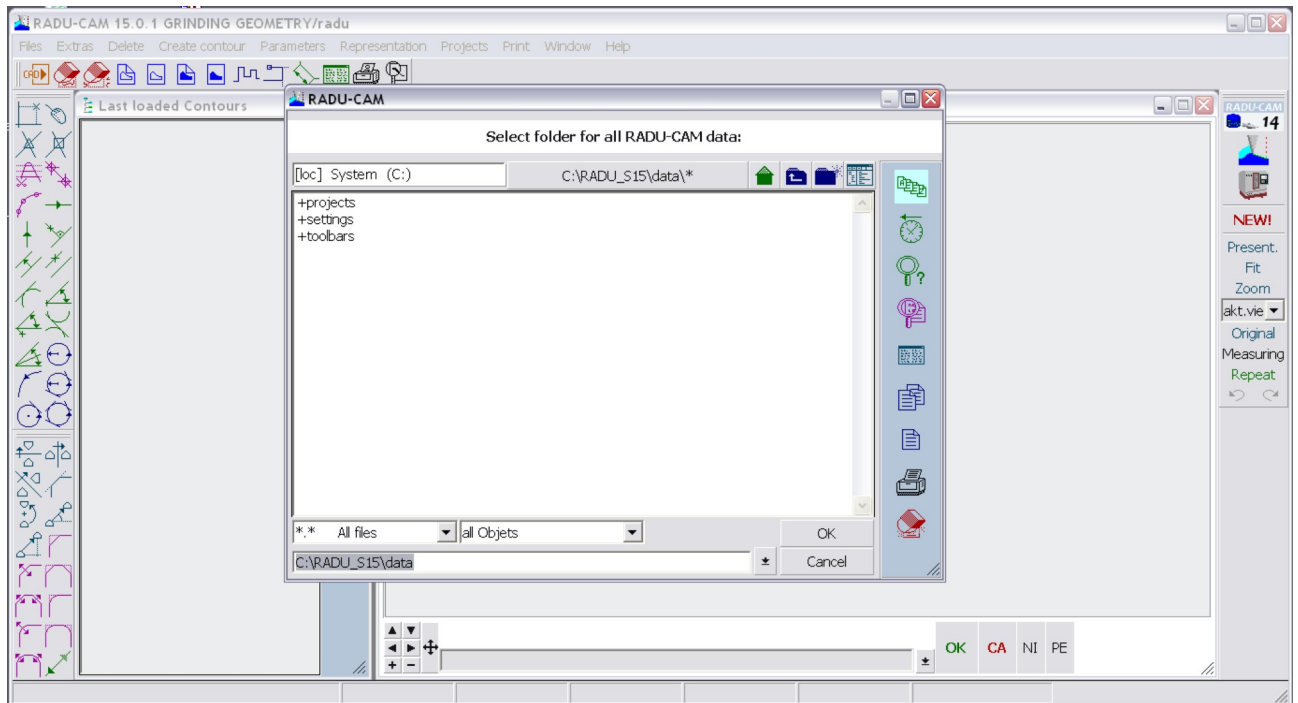

4.1 Directory of all data and settings

First, the directory for all RADU-CAM Grinding data and settings should be selected:

By default, this folder is inside the RADU-CAM Grinding installation folder.

It is recommended to locate this folder on a server with file backup functionality.

This folder can be changed later. All generated data must then be moved manually.

4.2 Parallel installations of different RADU-CAM Grinding versions

If a new RADU-CAM Grinding version has been installed parallel to an older version of RADU-CAM Grinding, and the exiting data of the older version should be used in the ne version, enter here the path to the date folder of the existing RADU-CAM Grinding version.

All data, projects, settings and license form the existing RADU-CAM Grinding version is available in the new RADU-CAM Grinding version.


All RADU-CAM Grinding versions are using the same data, projects and settings.

In this case, take care, that data created by a newer RADU-CAM Grinding version probably can't be read properly in an older RADU-CAM Grinding version and settings done in a newer RADU-CAM Grinding version have perhaps no effect in an older RADU-CAM Grinding version.


Data, projects and settings are always downwards compatible and only partial upwards compatible!

4.3 License

After that, the license key is required:

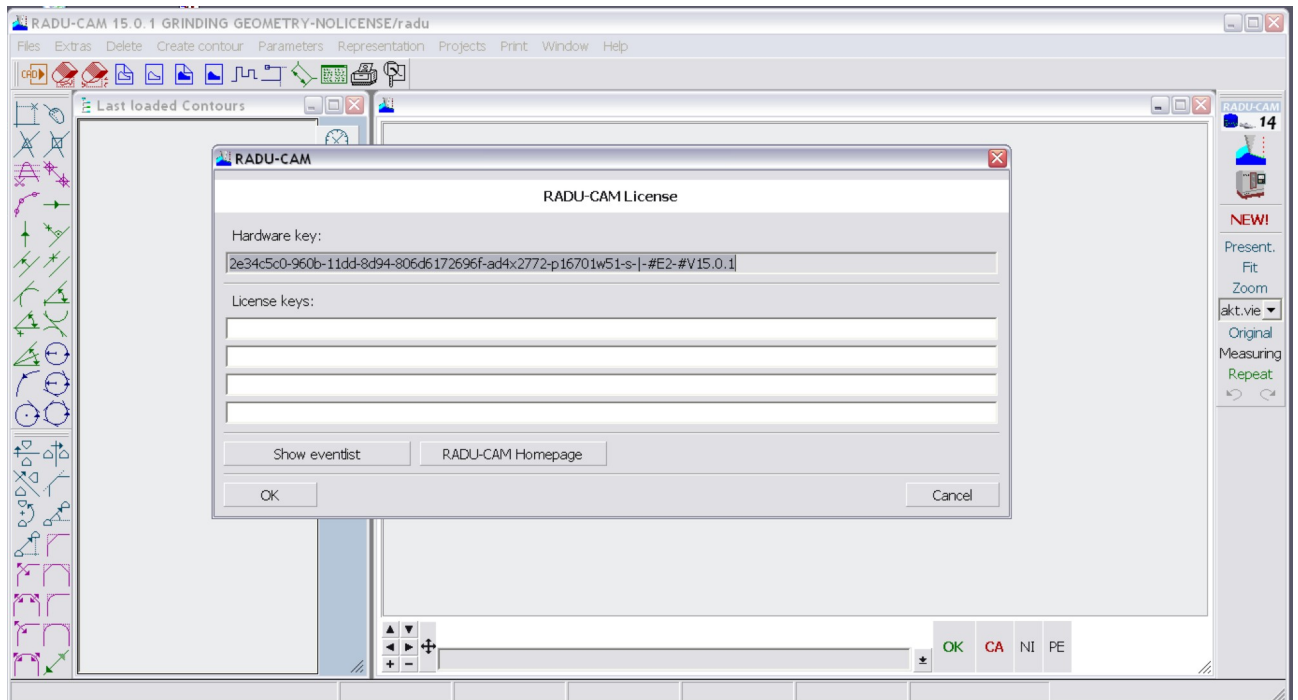


If no license key or a wrong license key is entered, this message appears:

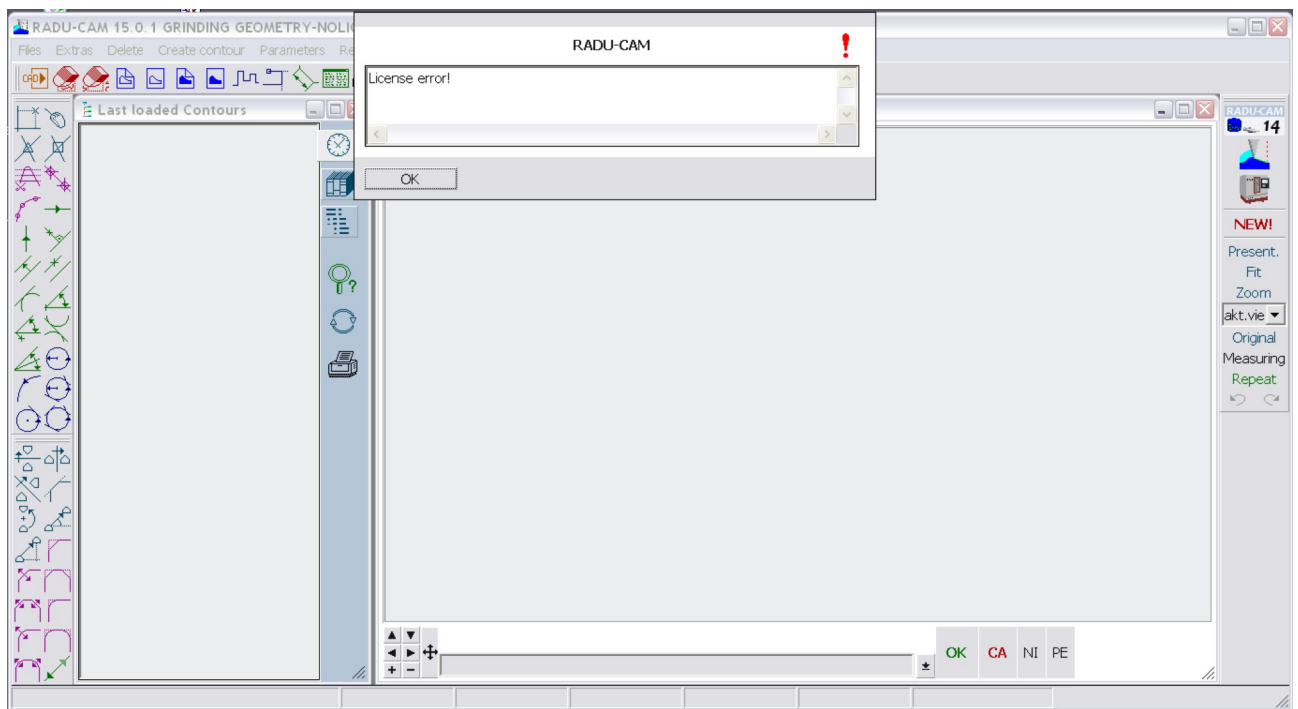

RADU-CAM Grinding is closed automatically.

A wrong license key can be entered 20 times. After this, RADU-CAM Grinding must be uninstalled and installed again.

The license key must be entered in one of the 4 lines.

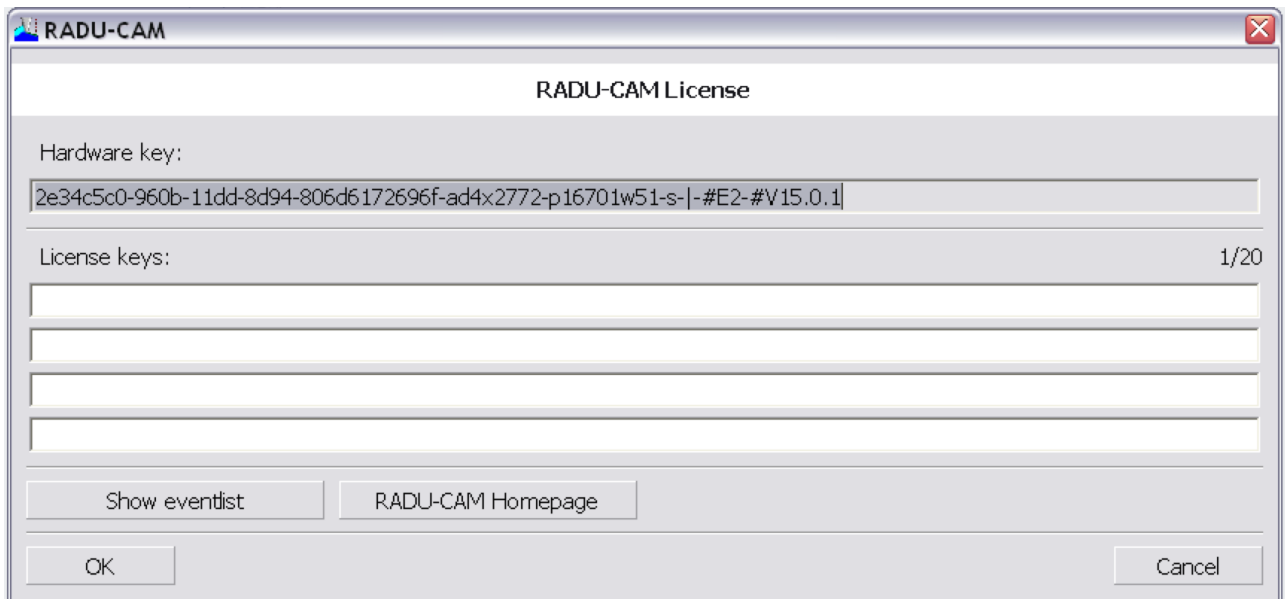

RADU-CAM License

Hardware key:

2e34c5c0-960b-11dd-8d94-806d6172696f-ad4x2772-p16701w51-s-|-#E2-#V15.0.1

License keys: 1/20

Show eventlist RADU-CAM Homepage

OK Cancel

4 license keys can be entered. The reason is changing hardware configurations because of docking stations for notebooks.

4.4 Request of the License Key


The license key is generated from the hardware key and only valid for the computer with the related hardware key

The license key is requested by sending the hardware key to:

license@radu-cam.de


5 Ready for use

If a valid license key is entered, RADU-CAM Grinding is ready for use:

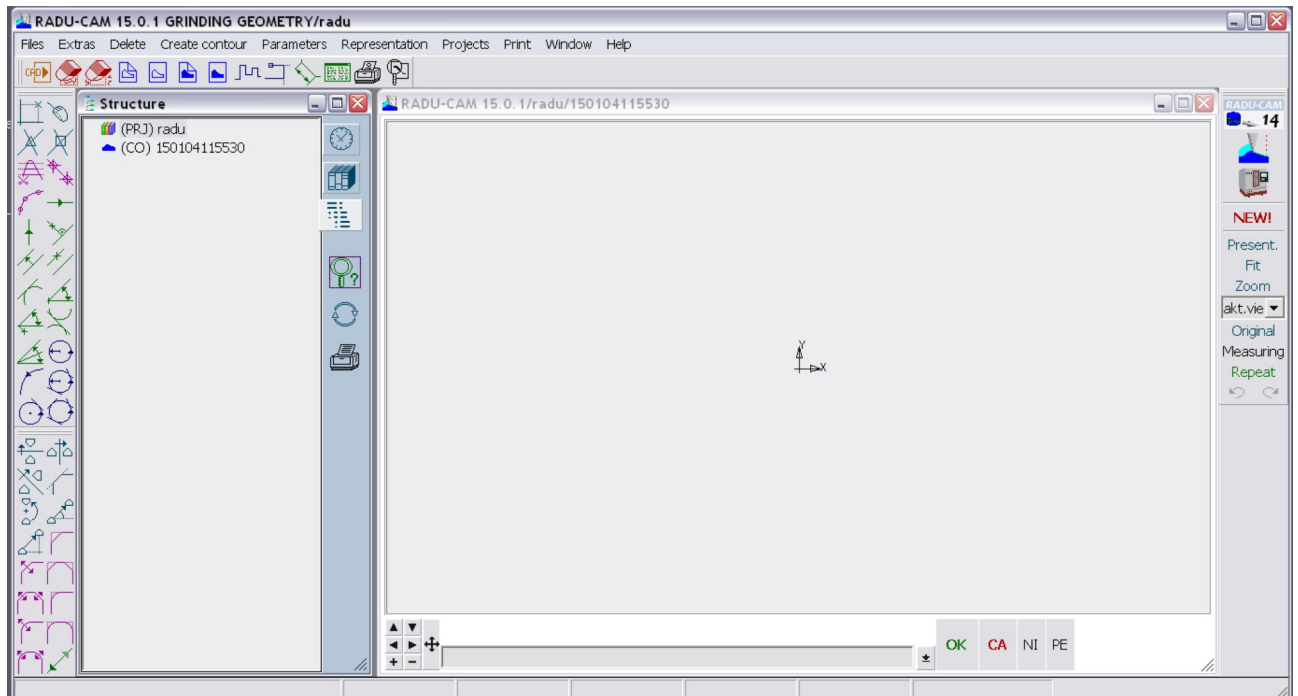

6 Documentation

The whole documentation is available from the “Help” Menu.

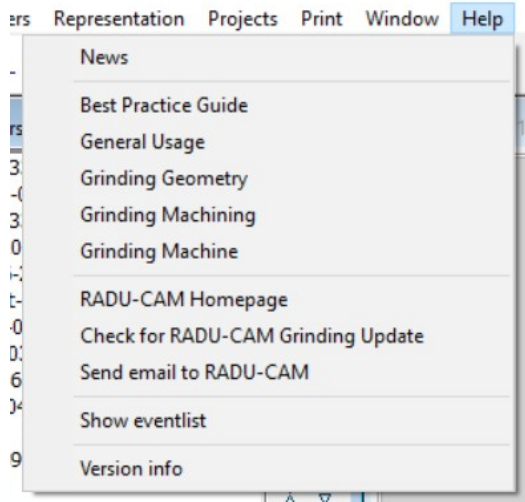

These are PDF files in English and German located in the “help” subfolder of the installation folder.

Neu	Öffnen	Auswählen	
> help			
"help" durchsuch			
Name	Änderungsdatum	Typ	
de	26.02.2016 13:09	Dateiordner	
en	26.02.2016 13:09	Dateiordner	
BestPractice.pdf	11.10.2016 21:58	PDF-XChange Vie...	
General.pdf	11.10.2016 21:58	PDF-XChange Vie...	
Geometry.pdf	11.10.2016 21:59	PDF-XChange Vie...	
Grinding.pdf	11.10.2016 22:00	PDF-XChange Vie...	
InstallAnleitung.pdf	11.10.2016 22:01	PDF-XChange Vie...	
news.txt	11.10.2016 21:15	TXT-Datei	
news_de.txt	19.07.2015 11:59	TXT-Datei	
Post.pdf	11.10.2016 22:01	PDF-XChange Vie...	
BestPractice.pdf	11.10.2016 22:28	PDF-XChange Vie...	
General.pdf	11.10.2016 22:03	PDF-XChange Vie...	
Geometry.pdf	11.10.2016 22:03	PDF-XChange Vie...	
Grinding.pdf	11.10.2016 22:23	PDF-XChange Vie...	
InstallGuide.pdf	11.10.2016 22:23	PDF-XChange Vie...	
news.txt	11.10.2016 21:16	TXT-Datei	
news_en.txt	19.07.2015 11:57	TXT-Datei	
Post.pdf	11.10.2016 22:24	PDF-XChange Vie...	

7 Language setting

7.1 Automatic Language setting

RADU-CAM Grinding identifies automatically the language of the operating system. If not language is identified, English is the default language and this dialog appears:




A language can be selected

7.2 Manual Language selection

To change the language selection, click on the RADU-CAM logo

In the Administration menu the language can be selected.

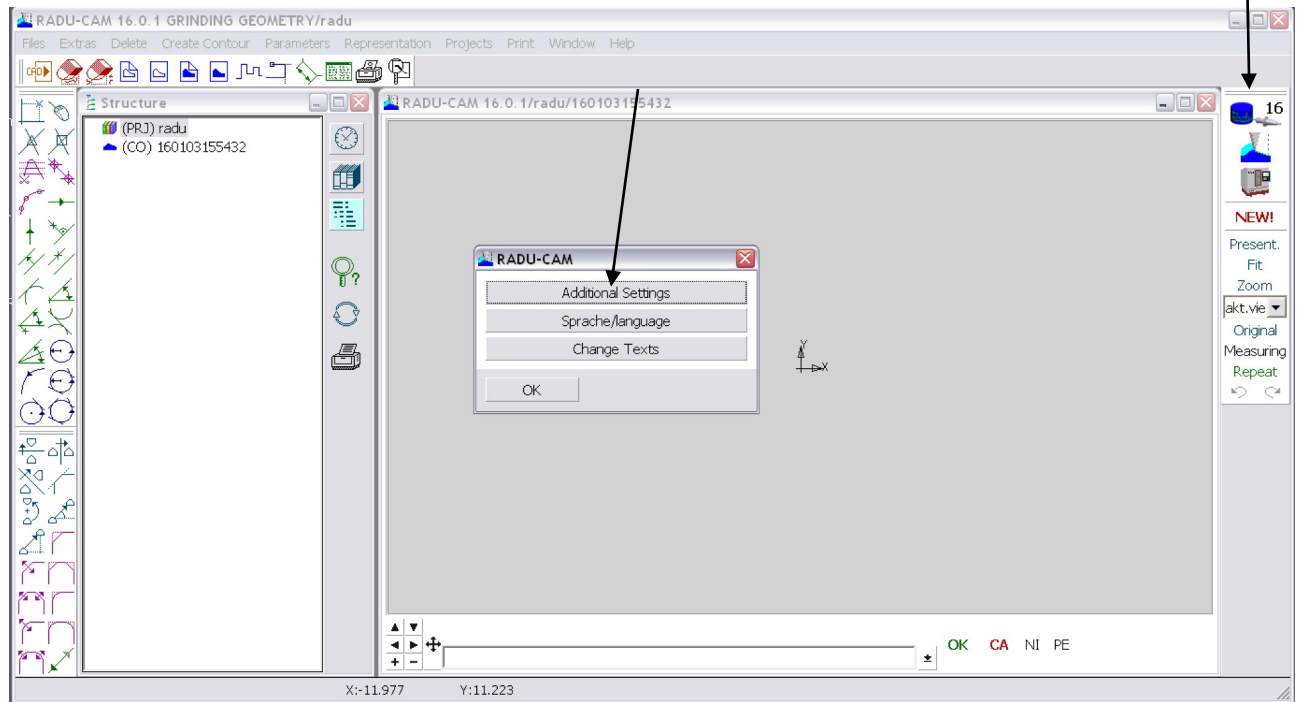

8 Request of the License Key before installation

To request a license key before the installation of RADU-CAM grinding, the hardware key must be generated. This can be done with the software radukey.exe.

The software can be downloaded on www.radu-cam.de in the support section.

The software is zipped: radukey.zip.

When unzipping the software, a password is required.

After unzipping, radukey.exe is created.

Double click the software, a file named key.txt is created in the same folder.




Send this file to the email address below to get a license key.


license@radu-cam.de

Handle the license key as described below.

9 Change License Key afterwards

To change the license key afterwards, open the license key dialog.

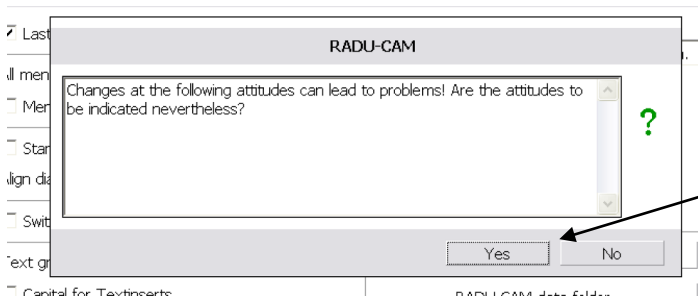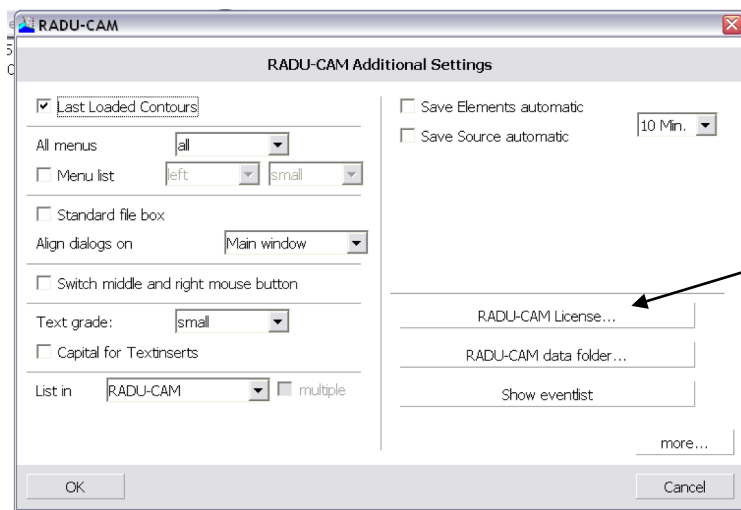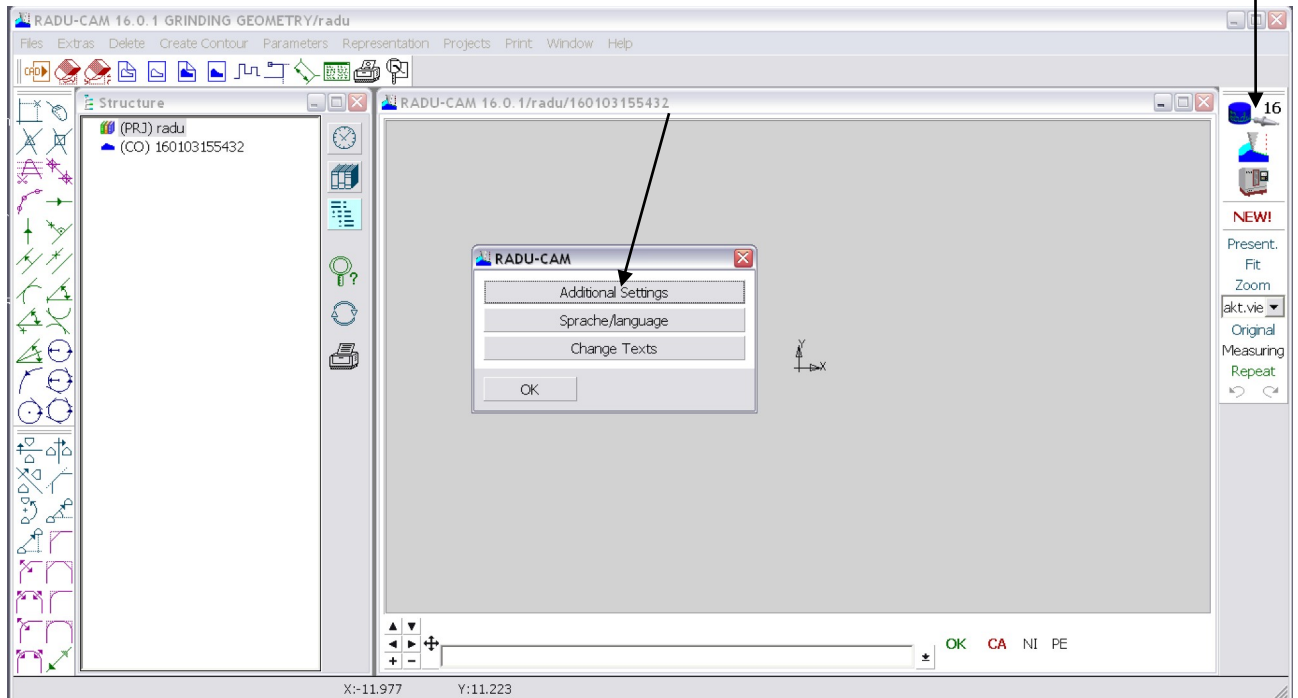

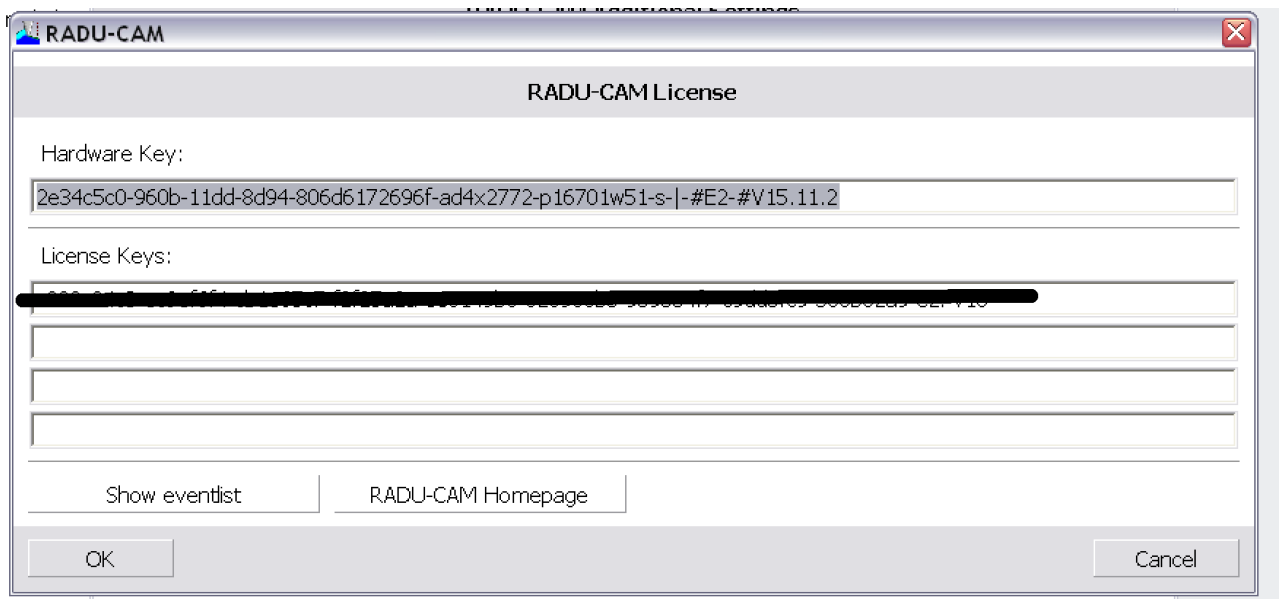

Replace the existing key by the new one.

10 Contact

RADU-CAM:

www.radu-cam.de

+49 7161 5078748

support@radu-cam.de

11 Disclaimer

The author reserves the right not to be responsible for the topicality, correctness, completeness or quality of the information provided. Liability claims regarding damage caused by the use of any information provided, including any kind of information which is incomplete or incorrect, will therefore be rejected.

The copyright for any material created by the author is reserved. Any duplication or use of this material in other electronic or printed publications is not permitted without the author's agreement.